


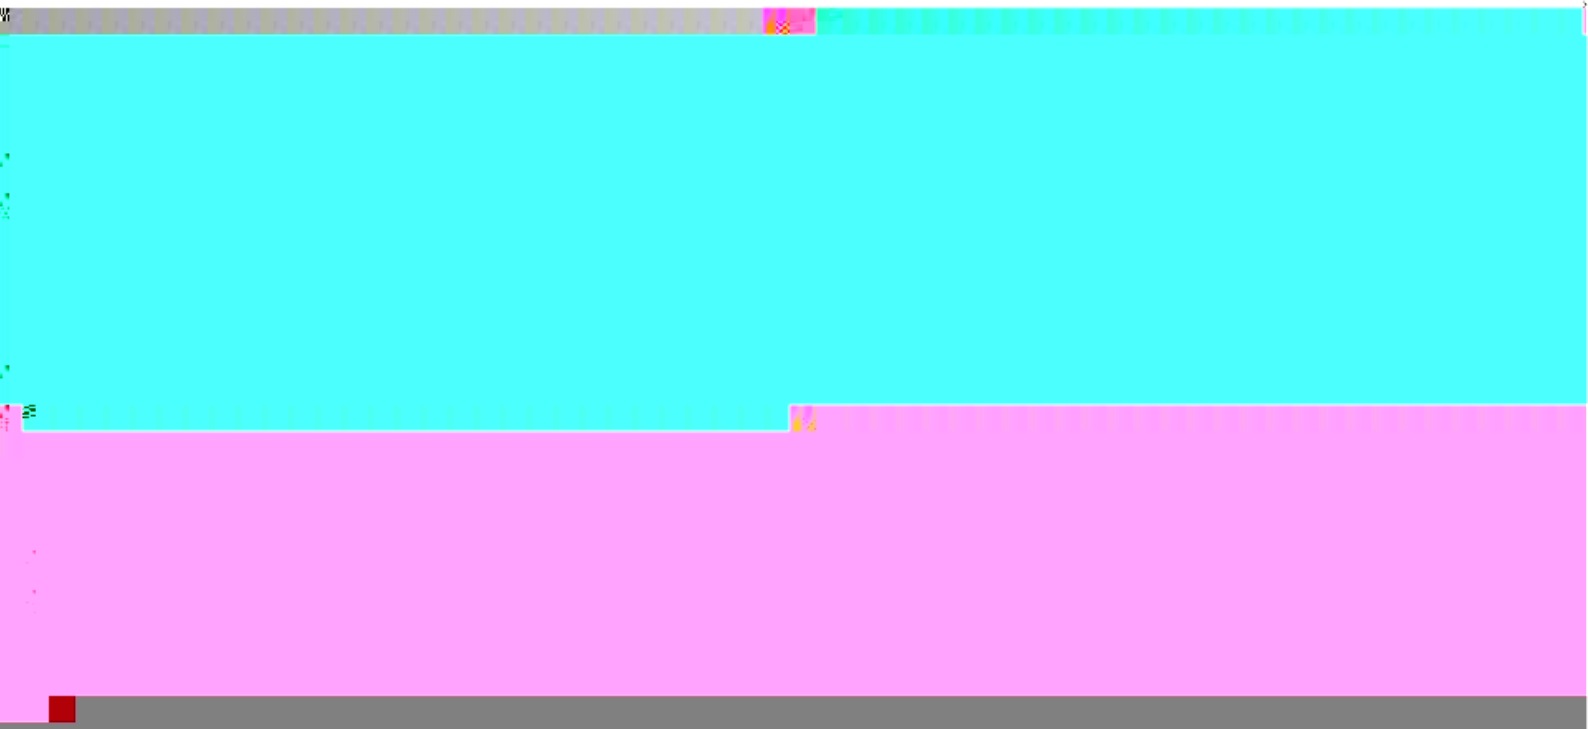

(“ ”)



		2
		3
1		4
2		4
3 Coze		4
3.1		4
3.2 botid		5
3.3 voiceid		5
3.4		6
3.4.1 WiFi		6
3.4.2		6
3.5		6
4		6


AI Redcap

AI



12v

SIM

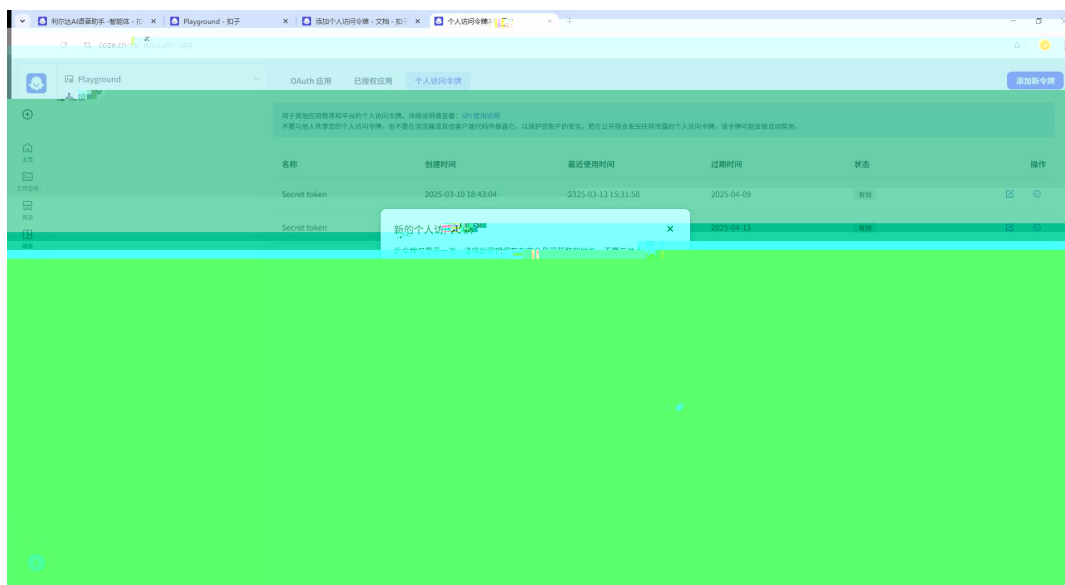

botid :



https://www.coze.cn/open/docs/guides/sys_voice#aa82f73d

中文音色

场景	音色 id	音色名称
通用场景	7426720361732980745	少年梓辛
	7426725529589661723	开朗姐姐
	7426725529681657907	心灵鸡汤
	7426725529589661723	清透梓梓
	7426720361733177353	渊博大叔

Redcap AI WiFi AP SSID lierda_wifi_rtc 12345678

- 2 SSH Web
- SSH 192.168.1.1 22 root lierda

```
root@NR90-HCM:~# cat /liotdata/liot_rtc
config rtc 'rtc'
option enable '0'
option pat 'pat'
option botid '7480018044727918618'
option voiceid '7426720361732980745'
```

- Web 192.168.1.1 lierda 123456

SSH sync reboot Web

AI

- 1.
2. “ ”

